



Ввод					Привод №1				Привод №2						
L1	L2	L3	N	PE	1L12	1L32	PE	2L12	2L22	2L32	PE	XT3	NO	COM	NC
01	02	03	04	05	01	02	03	04	01	02	03	04	01	02	03
XT1					1XT2			2XT2				XT3			

"Неисправность насоса M1"	"Неисправность насоса M2"	"Аварийный уровень"	"Ошибка уровня"	"M1 включён"	"M2 включён"
NO	NO	NO	NO	NO	NO
01	05	07	10	14	16
COM	COM	COM	COM	COM	COM
02	06	08	11	15	17
NC	NC	NC	NC	NC	NC
03	09	09	12	13	18

Нижний уровень	Средний уровень	Верхний уровень	Аварийный уровень
01	03	05	07
02	04	06	08
04	06	08	10
XT4			

